



**8 Power Street
Levin, 5510
Phone: 06 368.8076
email: mike@sadl.co.nz**

To load PRIME onto a Strong 46 Series.

- 1.Press 'Menu'
- 2.Highlight 'Installation' and Press OK.
- 3.Enter Pin No. 0000
- 4.Highlight 'Manual Scan' and Press OK.
- 5.Highlight 'Frequency' and Change to 12456
- 6.Make sure both Level & Quality bars have Levels in GREEN
- 7.Press OK to start scan.
- 8.LET IT SEARCH
- 7.Once it goes back to Manual Serach menu press Exit.

NB. You will need to re-locate Prime to where you want it as per the instructions on page 26 of your manual.